


SINGER Non-Stick Foot Snap-On Presser Foot for Low-Shank Sewing Machines

The Non-Stick Foot is used to sew fabrics such as leather, plastic, vinyl and oilcloth. The slick surface on the Non-Stick Foot's underside allows for effortless glide on those tricky fabrics. Set the sewing machine to a medium-long straight stitch for best results.

Beading Foot

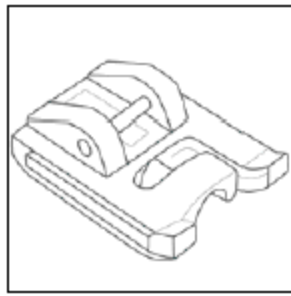

This foot is transparent.

This foot is used to attach bead strings for surface embellishment.

Note: This foot will accommodate bead strings with a maximum width of 5mm.

1. Snap on the Beading Foot.
2. Thread the top of the machine with invisible thread and the bobbin with sewing thread that matches the color of the fabric.
3. Place the bead string under the foot, making sure it is centered in the groove on the underside of the foot. Pull a small length of the bead string out the back of the foot to hold while you start sewing. Place stabilizer under the fabric.
4. Testing on a scrap fabric, select a zigzag stitch, with the width setting wide enough to go over the bead string without hitting the bead string. Check by turning the handwheel toward you slowly to make sure the swing of the needle clears the bead string.
5. Stitch the bead string, sewing slowly. Depending on the fabric being sewn, it may be necessary to reduce upper thread tension slightly.
6. Pull the work out toward the back of the presser foot to remove it when finished sewing.